



Service Manual

Original Instruction



TX2000

Battery Powered Tool

Contents

Annual Service

Service Kit	4
Before Dismantling	4

Repairs & Major Service

Moulded Body Assembly	5
Pump Assembly	6
Motor, Gearbox, Electrical Assembly	6
Head Assembly	7
Trigger Mechanism	8
Housing Assembly	8
Reservoir Assembly	9
Troubleshooting	9
Assembly Diagram & Base Tool	10
Parts List	11

This manual is only for use by Avdel® authorised distributors and repair centres.

IMPORTANT: The warranty is invalidated if the installation tool is not identified with a relevant serial number label. The label is positioned internally, at the base of the handle, on the left moulding, 41. When replacing the moulded body a new label, 83, must be inserted and marked by hand with the tool's original serial number.

Annual Service

Annual/500,000 Cycle Service

- Every 500,000 cycles the tool should be completely dismantled and new components should be used where worn, damaged or recommended. All 'O' rings and seals should be renewed and lubricated with MolyKote 111 grease before assembling.
- For an easy complete service, Avdel offer a complete service kit as detailed below.

Service Kit: 71600-99990

Spanners are specified in inches and across flats unless otherwise stated

Part No.	Description	Part No.	Description
07900-00006	Spatular	07900-00748	Threaded Sleeve Bullet
07900-00008	$\frac{7}{16}$ x $\frac{1}{2}$ Spanner	07900-00747	Valve Seat Tool
07900-00012	$\frac{9}{16}$ x $\frac{5}{8}$ Spanner	07900-00749	Threaded Sleeve Tool
07900-00015	$\frac{5}{8}$ x $1\frac{1}{16}$ Spanner	07900-00750	Valve Needle Sleeve
07900-00243	Screwdriver - Small	07900-00751	3mm Allen Key - Short Reach
07900-00333	Screwdriver - Medium	07900-00753	Circlip Pliers - Small
07900-00469	2.5mm Allen Key	07900-00754	Priming Pump
07900-00737	Piston Seal Sleeve	07900-00755	Grease - MolyKote 111 - 100g tube
07900-00738	Piston Seal Tool	07900-00756	Loctite® 243 Threadlocker
07900-00739	Piston Bullet	07900-00757	Scalpel
07900-00740	Cylinder Collar	07900-00760	Pozi Screwdriver
07900-00741	Guide Tube	07900-00788	Service Kit Storage Case
07900-00742	Insertion Rod	07900-00768	Reservoir Bullet
07900-00743	End Cap Assembly Tool	07900-00769	Trigger Tool
		07992-00020	Grease - Moly-Lithium

Before dismantling:

- Disconnect the battery before any servicing or dismantling is attempted, unless specifically instructed otherwise.
- Care must be taken at all times to ensure that conditions are clean so that no foreign matter enters the tool or serious damage may result.
- Empty the oil from the tool following the first three steps of the priming procedure. Refer to the priming procedure on pages 14 and 15 of the Instruction Manual.
- Remove the nose equipment.

For a complete service of the tool, we advise that you proceed with dismantling of sub-assemblies in the order shown on page 5. After dismantling the tool we recommend that you replace all seals.

On reassembly it is essential to prime the tool and fit an appropriate nose assembly prior to operating.

Repairs and Major Service

Moulded Body Assembly

IMPORTANT: The warranty is invalidated if the installation tool is not identified with a relevant serial number label. The label is positioned internally, at the base of the handle, on the left moulding, 41. When replacing the moulded body a new label, 83, must be inserted and marked by hand with the tool's original serial number.


The moulded body assembly includes items **1, 2, 33, 41 to 45, 47, 48, 53, 54, 81** and **83**. These parts are only available as a complete Body Moulding Assembly Kit (part number 71600-99600), unless a minimum order quantity is provided in the parts list.

- Remove and discard label **42** from the right moulding **43** to reveal the hidden screw.
- Remove the nose tip spanner **53** and two nose tips from the moulded body.
- Place the tool on its side and using the pozi screwdriver unscrew all eight pozi screws **45** in the moulded body.
- Remove the right moulding **43** leaving the main internal mechanism within the left moulding **41** as shown on page 10.
- Remove the vent screen **54**, battery retainer spring **47** and dowel pin **48** from the left moulding **41**.
- Before removing the main internal mechanism ensure that the electrical control circuit **5** and the reservoir **73** are released from the mounting points within the moulding.
- Holding the tool by the motor and gearbox assembly **3** remove the main internal mechanism from the moulding.

Assemble in reverse order to dismantling noting the following points:

- Place the main internal mechanism into the left moulding **41**, first ensuring that the electrical control circuit **5** and the reservoir **73** are correctly placed within the mounting positions provided. The circuit board must be positioned so that the heat sink is facing forward and the black and blue wires are at the top. The contact holder **4** must be positioned with the positive symbol in the left moulding **41** as shown in the diagram below.
- The contact holder is designed to enable correct orientation in the mouldings. Care must be taken to ensure that the raised portion on the right moulding **43** fits within the indent on the negative side of the contact holder **4**.
- When replacing the right moulding **43** take care to ensure that no wires are trapped and correct alignment with the electrical control circuit **5** and the vent screen **54** are achieved.
- When the moulded body is fully assembled with all eight pozi screws **45**, insert new case label **42** on the right moulding **43**.

IMPORTANT: Correct orientation of the contact holder 4 must be achieved when assembling into mouldings 41 and 43. Incorrect assembly will cause short circuit and failure of electrical control circuit.

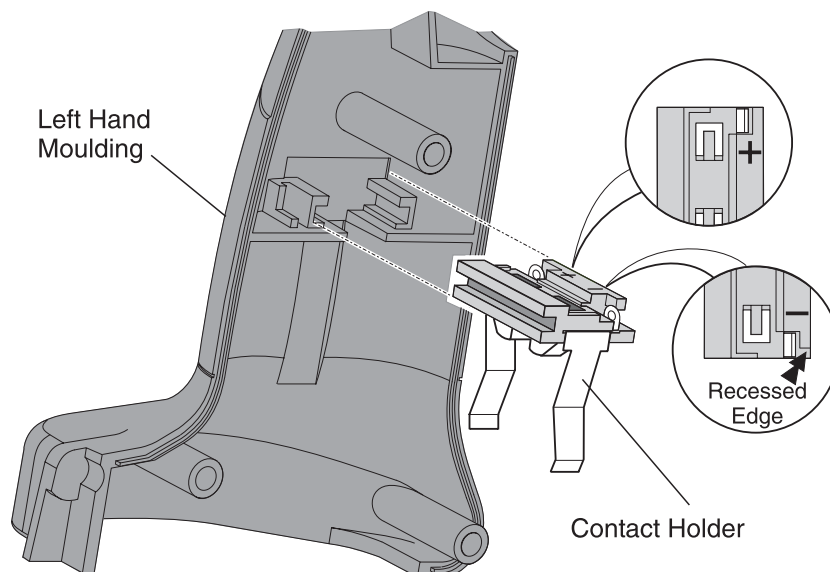

Repairs and Major Service

Pump Assembly

The pump assembly includes items **29, 35, 36, 37, 49, 51** and one of the following plunger seal combinations, either seals (**37** and **50** 2 off) or (**37, 84** and **85**). These parts are only available fully assembled as a complete Pump Assembly Kit (part number 71600-99601), unless a minimum order quantity is provided in the parts list.

- Completely remove the main internal mechanism from the left and right mouldings **41, 43**, as described on page 5.
- To gain access to the pump attachment screws **29** the trigger assembly, items **34, 40**, must be removed. Using the circlip pliers remove one circlip **67** from pin **66**. Push the pin out allowing the trigger lever **34** and trigger button **40** to be removed.
- Hold the main internal mechanism and pump block **51** securely in position and using the 3 mm allen key remove the four attachment screws **29**. Remove the complete pump assembly from the housing **24**. Care must be taken when removing the pump assembly as the plunger **36** will be spring loaded.
- Remove the plunger **36** and spring **35** from the pump block **51** taking care not to damage the seals, plunger surface and the pump block bore.
- Remove 'O' ring **49** from housing **24** and discard.

Assemble in reverse order to dismantling noting the following points:

- Clean the plunger **36** and apply a small amount of Molykote 111 grease to the seals using the spatula.
- Clean the pump block **51** bore and then lubricate with Molykote 111 grease using the spatula.
- Place spring **35** over the sealed plunger, align the end of the plunger with the pump block **51** bore and push into place until the seals are no longer visible. When inserting the plunger take care not to damage the seals on the rim of the pump block bore.
- Apply a light film of Loctite® 243 threadlocker to all four screws **29**.
- Attach the pump assembly onto the housing **24** as before using four screws **29** and the 3 mm allen key.
- Finally assemble the trigger assembly, items **34, 40**, and pin **66** in reverse order to dismantling.

Motor, Gearbox and Electrical Assembly

The motor, gearbox and electrical assembly includes items **3, 4, 5, 28, 38** and **52**. These parts are only available as a complete assembly (part number 71600-99602), unless a minimum order quantity is provided in the parts list.

- Completely remove the main internal mechanism from the left and right mouldings **41, 43**, as described on page 5.
- Remove the 'pump assembly' as described above.
- Using the small screwdriver remove the two screws **28** that retain the micro-switch to the switch bracket **27**.
- Using the 3 mm allen key remove all three screws **38** and washers **52** attaching the gearbox to the housing **24**.
- Remove the complete motor, gearbox and electrical assembly **3, 4** and **5** from the housing **24**.

Assemble in reverse order of dismantling noting the following points:

- Ensure that the motor and gearbox assembly, when connected to the housing **24**, is orientated so that the groove in the gearbox mounting plate is at the top.
- Apply Loctite® 243 threadlocker to all three screws **38**.
- DO NOT USE UNDUE FORCE when inserting the three screws **38** into the housing **24**.

Repairs and Major Service

Head Assembly

The head assembly consists of three assembly kits, Cylinder Assembly Kit (part number 71600-99603), Piston Assembly Kit (part number 71600-99604) and Head Seal Kit (part number 71600-99605) containing items **6 to 18, 21, 22, 23, 30** and **32**. These parts are only available as complete kits unless a minimum order quantity is provided in the parts list.

- Completely remove the main internal mechanism from the left and right mouldings **41, 43**, as described on page 5.
- Remove the complete motor, gearbox and electrical assembly **3, 4** and **5** as described on page 6.
- Unscrew locknut **31** and jaw spreader housing **20** from the piston **18**.
- Using the 3 mm and 2.5 mm allen keys remove screws **11, 23, 30**, clamping the cylinder **32** to the housing **24**.
- Remove the head assembly from the housing. Remove 'O' ring **56** from the housing and discard.
- Grip the head assembly in a vice using soft jaws to avoid damage.
- Using the end cap assembly tool unscrew and remove the cylinder cap assembly, items **6, 7, 8, 9** from the rear of the cylinder **32**. Care must be taken as the cylinder cap **7** will be spring loaded.
- Remove and discard the spring **10** from inside the cylinder **32**.
- Push the piston **18** to the rear and out of the cylinder **32** taking care not to damage the cylinder bore.
- Using the medium screwdriver enter the rear of the cylinder **32**, lever the rod seal **15** from the groove and cut through with a scalpel taking care not to damage the cylinder bore or the seal groove. Using the spatula push the rod seal, followed by bearing ring **16** and 'O' ring **17** to the rear and out of the cylinder. If at any time the cylinder bore or seal groove become damaged the cylinder must be replaced.
- Using a scalpel cut through and remove the piston seal **14** from the piston **18**. Then remove bearing ring **13** and 'O' ring **12**. Take care not to damage the piston when cutting the seal.

Assemble in reverse order to dismantling noting the following points:

- Clean all components before assembling.
- To aid assembly of seals apply a light coating of Molykote 111 grease to both the seals and the assembly tools.
- Lubricate the cylinder **32** bore and seal grooves with Molykote 111 grease. Insert the bearing ring **16** into place within cylinder. With the aid of the spatula insert the 'O' ring **17**. Place the rod seal **15** onto the insertion rod ensuring correct orientation. Push the guide tube into the cylinder bore and push the insertion rod with the seal into place through the guide tube ensuring seal is correctly seated. Pull the insertion rod out then the guide tube.
- Lubricate the piston **18** shaft and seal grooves with Molykote 111 grease and fit 'O' ring **12** and bearing ring **13**. Place the piston seal sleeve over the piston shaft, then slide the piston seal **14** over the sleeve and into position using the piston seal tool ensuring correct orientation.
- Insert the cylinder collar into the back of the cylinder **32**. Screw the piston bullet onto the piston **18** and push the piston with the seals through the cylinder collar as far as it will go. Unscrew the bullet off the piston and remove the cylinder collar.
- Apply a light coating of Moly-lithium grease to the surface and ends of the spring **10** before inserting onto the piston **18** within the cylinder.
- Screw the cylinder cap assembly, items **6, 7, 8, 9**, into the cylinder **32** using the 'T'-bar and end cap assembly tool.
- Insert 'O' ring **56** into the housing and lubricate with Molykote 111 grease.
- Fit the head assembly to the housing **24** using the three screws **11, 23, 30**, coated with Loctite® 243 threadlocker.
- When inserting jaw spreader housing **20** onto piston **18**, screw down fully until it bottoms out on the end of the piston shaft. Secure jaw spreader housing **20** using locknut **31**.

Repairs and Major Service

Trigger Mechanism

The trigger mechanism includes items **34, 40, 58 to 69**. These parts are only available as a complete Trigger Mechanism Kit (part number 71600-99606), unless a minimum order quantity is provided in the parts list.

- Completely remove the main internal mechanism from the left and right mouldings **41, 43**, as described on page 5.
- Using the circlip pliers remove one circlip **67** from pin **66**. Push the pin out allowing the trigger lever **34** and trigger button **40** to be removed.
- Using the circlip pliers carefully remove circlip **68** from the valve needle **61**, followed by shim **69**, trigger plate **65** and spring **60**. Discard the spring **60**.
- Using the threaded sleeve tool unscrew and remove the threaded sleeve **64** from the housing **24**. Remove 'O' ring **62** from the threaded sleeve and discard.
- Remove the valve needle **61** from the housing **24**, then remove and discard the spring **60** from the valve needle **61**. Using a scalpel cut 'O' ring **63** from the valve needle taking care not to damage the seal groove.
- Using the valve seat tool unscrew the valve seat **59** and remove from the housing **24**. Remove bonded seal **58** from valve seat and discard.

Assemble in reverse order to dismantling noting the following points:

- Clean all components before assembling.
- Lubricate valve needle **61** shaft and seal groove with Molykote 111 grease and place the valve needle tool over the end of the valve needle **61**. Slide 'O' ring **63** over the valve needle sleeve and into the seal groove on valve needle. Remove the valve needle sleeve from the valve needle.
- Lubricate threaded sleeve **64** with Molykote 111 grease and place the threaded sleeve bullet over the end of the threaded sleeve. Slide 'O' ring **62** over the threaded sleeve bullet and into the seal groove on threaded sleeve. Remove bullet from threaded sleeve.
- DO NOT USE UNDUE FORCE when inserting the valve seat **59** into the housing **24**.
- When fitting threaded sleeve **64** into housing **24**, ensure the component is screwed fully down until stopping against the valve seat **59**.
- When fitting trigger plate **65**, ensure correct orientation is achieved.
- Using the trigger tool and pin **66** in place of the trigger lever **34**, fully compress the trigger plate **65** into the threaded sleeve **64** against the spring **60**. The end of the valve needle **61** will become exposed. Place the shim **69** over the valve needle and then insert the circlip **68** into the groove using the circlip pliers. Release and remove the trigger tool.

Housing Assembly

The housing assembly consists of items **24 to 27**, and **38**, all of which are available as individual parts, subject to a minimum order quantity. The assembly also contains items **39, 55, 56, 57, 70, 75 and 76**. These parts are only available as a complete Housing Hydraulic Kit (part number 71600-99607).

- Completely remove the main internal mechanism from the left and right mouldings **41, 43**, as described on page 5.
- Do not remove screws **25, 38**, from the housing **24**.
- Using medium screwdriver unscrew seal screw **75** from housing **24**. Remove 'O' ring **76** from seal screw.
- Using medium screwdriver unscrew inlet check valve **70** from housing **24**.
- In order to remove outlet check valve **55** the head assembly must be removed as described on page 7.
- Using medium screwdriver unscrew outlet check valve **55** from housing **24**. Remove 'O' ring **57** from outlet check valve and discard.
- Assemble in reverse order to dismantling.

Repairs and Major Service

Reservoir Assembly

The reservoir assembly includes items **21, 22, 25, 78, 82** and **71** to **74**. These parts are only available as a complete Reservoir Assembly Kit (part number 71600-99608), unless a minimum order quantity is provided in the parts list.

- Completely remove the main internal mechanism from the left and right mouldings **41, 43**, as described on page 5.
- Using the 3 mm allen key remove screw **21** and bonded seal **22** from reservoir **73**.
- Using the spatular remove 'O' ring **72** from reservoir **73** and discard.
- Remove reservoir **73** from reservoir adapter **74**.
- Using the 2.5 mm allen key, remove screw **25** attaching reservoir adapter **74** to housing **24**.
- Remove reservoir adapter **74** from housing **24**.
- Remove 'O' ring **71** from reservoir adapter **74** and discard.
- Do not remove the filter **78**, or the 'O' ring **82**, from the reservoir adapter **74** unless damaged. If removed discard both items.

Assemble in reverse order to dismantling noting the following points:

- Lubricate both 'O' ring **71** and seal groove on reservoir adapter. Place 'O' ring **71** in reservoir adapter **74**.
- Using 2.5 mm allen key and screw **25** fit reservoir adapter **74** to housing noting correct orientation with the holes.
- Slide open end of reservoir **73** over reservoir adapter **74** and into position within the groove.
- Place the reservoir bullet over the closed end of reservoir **73**. Slide 'O' ring **72** completely over the bullet until it falls into place around the end of the reservoir **73**, holding it in securely around the reservoir adapter **74**.
- Ensure that the reservoir **73** is correctly positioned on the reservoir adapter **74**, so that the flat face on the metal part of the reservoir is at the top.


IMPORTANT: Check the tool against daily and weekly servicing.

Priming is ALWAYS necessary after the tool has been dismantled and prior to operating.

Troubleshooting

Symptom	Possible Cause	Remedy	Page Ref
Fastener fails to break	Trigger mechanism springs worn	Replace trigger mechanism	8
Jaws will not release broken stem of fastener	Damaged spring in head assembly	Fit new spring	7
Tool fails to operate - motor operational:	Pump plunger jammed	Replace pump spring	6
if head piston static	Inlet check valve faulty	Replace inlet check valve	8
if head piston pulsing	Outlet check valve faulty	Replace outlet check valve	8
Tool fails to operate - motor not operational	Motor or gearbox failure	Test and replace any defective equipment	6
	Electrical control circuit failure	Test and replace any defective equipment	6

General Assembly of Base Tool 71600-02000

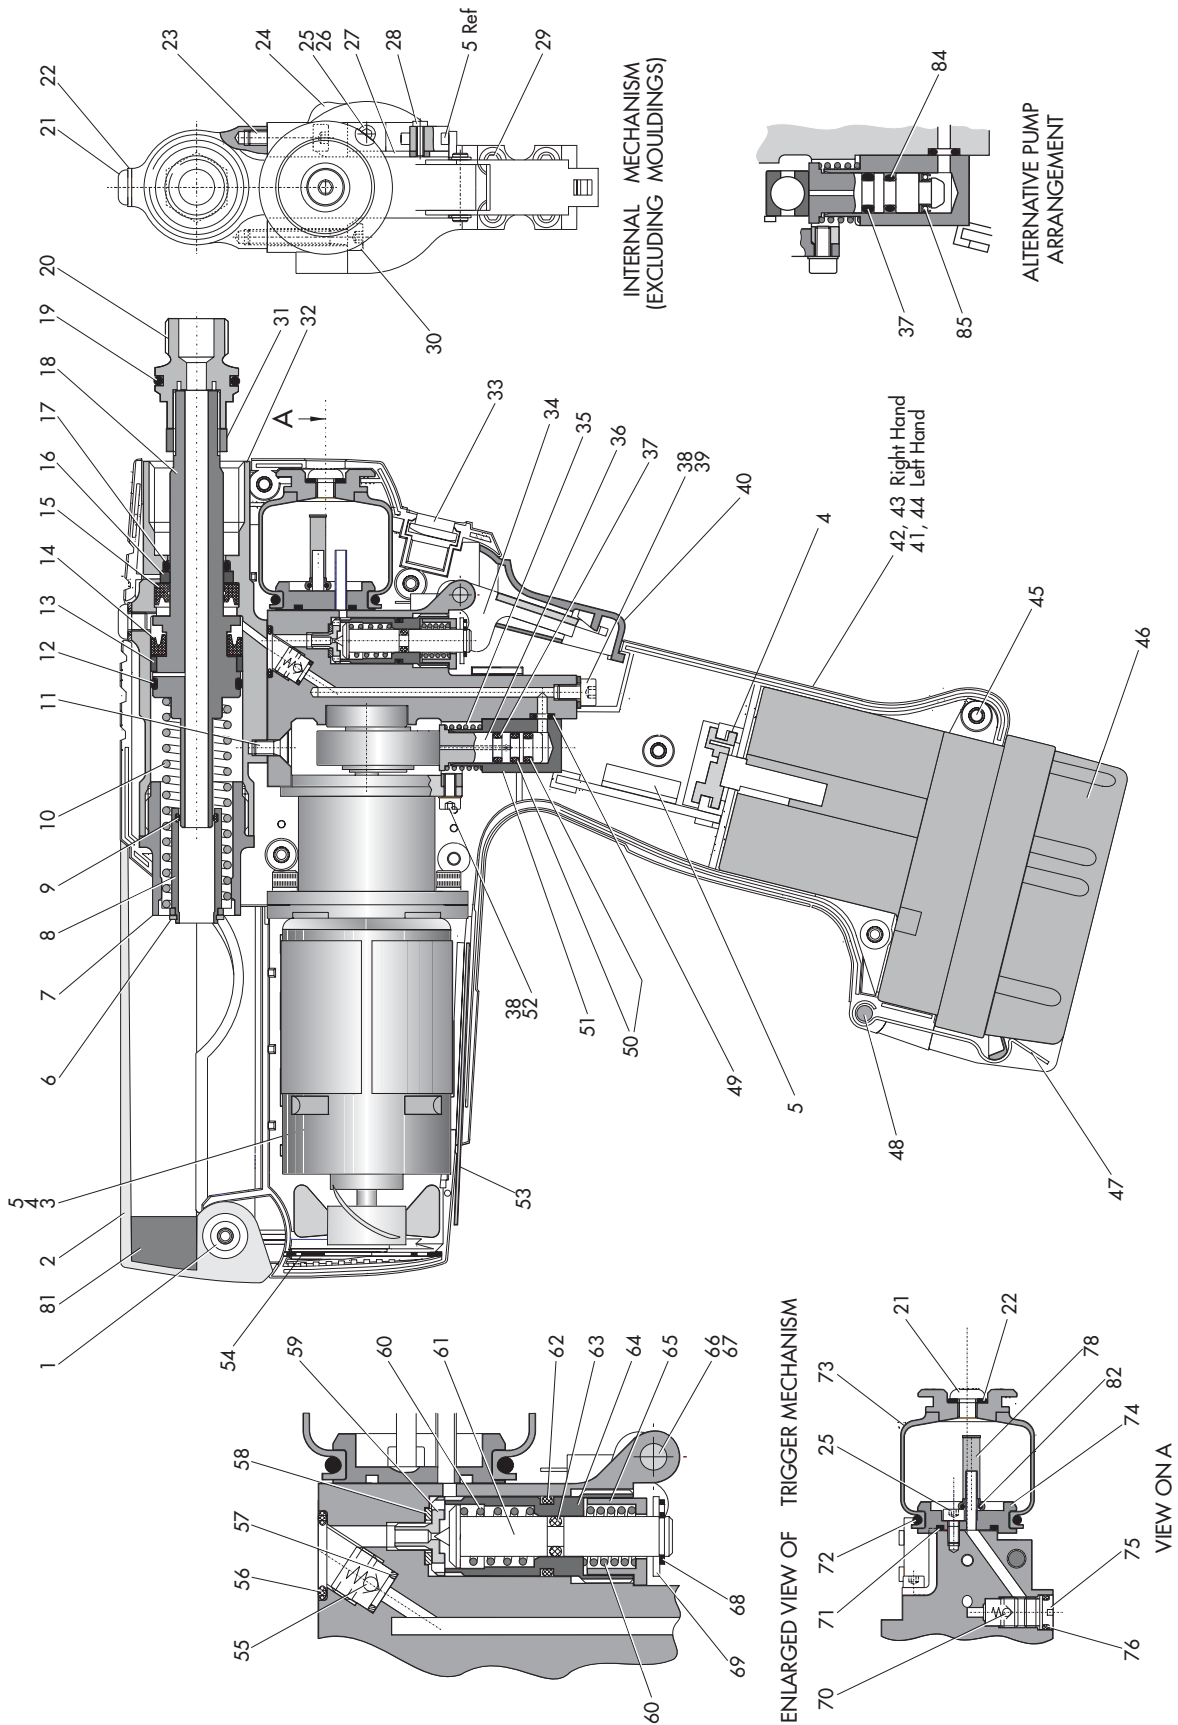

Parts List

ITEM	PART N°	DESCRIPTION	QTY	SPARES	MIN ORDER QTY	ITEM	PART N°	DESCRIPTION	QTY	SPARES	MIN ORDER QTY
1	71600-02004	Lid torsion spring	1	✓ 9	50	45	07001-00652	Pozi screw	8	✓ 9	50
2	71600-02003	Collector lid	1	9		46	07007-01954	Battery	1	✓	1
3	71600-03130	Motor & gearbox assembly	1	1		47	71600-02022	Battery retainer spring	1	✓ 9	10
4	71600-03110	Contact holder	1	1		48	07007-01957	Dowel pin	1	✓ 9	50
5	71600-03110	Electrical control circuit	1	1		49	07003-00353	O-ring	1	✓ 2	50
6	07004-00102	Circlip	1	✓ 7	50	50	07003-00351	O-ring	2	2	
7	71600-02016	Cylinder cap	1	7		51	71600-03202	Pump block	1	2	
8	71600-02015	Piston sleeve	1	7		52	07002-00156	Steel washer	3	✓ 1	50
9	07003-00350	O-ring	1	8		53	71600-02024	Nose tip spanner	1	✓ 9	10
10	71600-02012	Compression spring	1	7		54	71600-02025	Vent screen	1	9	
11	07001-00650	Socket csk head screw	1	✓ 6	50	55	07007-01956	Outlet check valve	1	5	
12	07003-00364	O-ring (piston)	1	8		56	07007-00365	O-ring (housing)	1	5	8
13	07003-00361	Piston bearing ring	1	8		57	07003-00359	O-ring for item 55	1	5	
14	07003-00243	Piston seal	1	8		58	07003-00355	Bonded seal	1	4	
15	07003-00273	Rod seal	1	8		59	71600-02019	Valve seat	1	4	
16	07003-00362	Cylinder bearing ring	1	8		60	71600-02029	Compression spring	2	4	
17	07003-00363	O-ring (cylinder)	1	8		61	71600-02017	Valve needle	1	4	
18	71600-02011	Piston	1	7		62	07003-00354	O-ring	1	4	
19	07003-00277	O-ring	1	✓	50	63	07003-00352	O-ring	1	4	
20	71210-02101	Jaw spreader housing	1	✓	1	64	71600-02018	Threaded sleeve	1	4	
21	07001-00654	Button head screw	2	✓ 3&6	50	65	71600-02020	Trigger plate	1	4	
22	07003-00194	Bonded seal	2	✓ 3&6	50	66	71600-02021	Pin	1	4	
23	07001-00646	Socket cap head screw	1	✓ 6	50	67	07004-00104	Circlip	2	✓ 4	50
24	71600-02009	Housing	1	✓	1	68	07004-00103	Circlip	1	✓ 4	50
25	07001-00647	Socket cap head screw	2	✓ 3	50	69	07002-00157	Steel shim washer	1	4	
26	07002-00155	Steel washer	1	✓	50	70	07007-01958	Inlet check valve	1	5	
27	71600-02014	Switch bracket	1	✓	10	71	07003-00349	O-ring	1	3	
28	07001-00648	Slotted cheese head screw	2	✓ 1	50	72	07003-00170	O-ring	1	3	
29	07001-00651	Socket cap head screw	4	✓ 2	50	73	71600-03310	Reservoir	1	3	
30	07001-00645	Socket cap head screw	1	✓ 6	50	74	71600-03304	Reservoir adapter	1	3	
31	71600-02026	Locknut	1	✓	10	75	71600-02013	Seal screw	1	✓	1
32	71600-02010	Cylinder	1	6		76	07003-00358	O-ring	1	5	
33	71600-02023	Nose tip holder	1	9		77	07007-01965	Battery charger - 220/240V-50Hz (UK)	1	✓	1
34	71600-03403	Trigger lever	1	4			07007-01966	Battery charger - 220/240V-50Hz (Europe)	1	✓	1
35	71600-03203	Compression spring	1	2			07007-01967	Battery charger - 220/240V-50Hz (Australia)	1	✓	1
36	71600-03201	Plunger	1	2		60	07007-01968	Battery charger - 110V-60Hz (USA, Canada)	1	✓	1
37	07003-00366	O-ring	1	2			07007-01969	Battery charger - 100V-50/60Hz (Japan)	1	✓	1
38	07001-00649	Socket cap head screw	4	✓ 1	50	78	07007-01980	Filter	1	3	
39	07003-00360	Bonded seal	1	5		79	07007-01960	Storage case	1	✓	1
40	71600-03401	Trigger button	1	4		80	07900-00759	Tool Instruction Manual - UK version	1	✓	1
41	71600-02002	Left moulding	1	9		81	71600-02031	Collector lid buffer	1	9	
42	71600-02028	Case label RH	2	✓ 9	10	82	07003-00371	O' Ring	1	3	
43	71600-02001	Right moulding	1	9		83	71600-02035	Blank serial number label	1	✓ 9	50
44	71600-02027	Case label LH	1	✓ 9	10	84	07003-00373	Energised PTFE seal	1	2	
						85	07003-00372	Energised lip seal	1	2	

Note

- Motor, Gearbox and Electrical Assembly (part number 71600-99602).** These items are only available as a complete assembly kit unless a minimum order quantity is stated.
 - Pump Assembly Kit (part number 71600-99601).** These items are only available as a complete assembly unless a minimum order quantity is stated.
 - Reservoir Assembly Kit (part number 71600-99608).** These items are only available as a complete assembly kit unless a minimum order quantity is stated.
 - Trigger Mechanism Kit (part number 71600-99606).** These items are only available as a complete assembly kit unless a minimum order quantity is stated.
 - Housing Hydraulic Kit (part number 71600-99607).** These items are only available as a complete kit.
 - Cylinder Assembly Kit (part number 71600-99603).** These items are only available as a complete assembly kit unless a minimum order quantity is stated.
 - Piston Assembly Kit (part number 71600-99604).** These items are only available as a complete assembly kit unless a minimum order quantity is stated.
 - Head Seal Kit (part number 71600-99605).** These items are only available as a complete assembly kit unless a minimum order quantity is stated.
 - Body Moulding Assembly Kit (part number 71600-99600).** These items are only available as a complete assembly kit unless a minimum order quantity is stated.
- ✓ These items are available as individual spares subject to the minimum order quantity - refer to Avdel sales.

Notes

Notes

Notes

Declaration of Conformity

We, Avdel UK Limited, Watchmead Industrial Estate, Welwyn Garden City, Herts, AL7 1LY declare under our sole responsibility that the product:

Model TX2000

Serial No.

to which this declaration relates is in conformity with the following standards:


TX2000 Tool

EN ISO 12100 - parts 1 & 2
EN 50260 - part 1
BS EN 982
BS EN ISO 8662 - part 6
BS EN ISO 3744
ISO EN 792 part 13 - 2000
BS EN ISO 11202
BS EN 55014 part 1 & 2
BS EN 50081 part 1

Battery Charger

VDE0700
EN 60335-1
EN 60335-2-29
EN 60742/0695
EN 50081-1
EN 55014
EN 60555-2/3
EN 50082-1
EN 55104

following the provisions of the Machine Directive 2006/42/EC.



A. Seewraj - Product Engineering Manager - Automation Tools

Date of issue



**This box contains a power tool which is in conformity with
Machines Directive 2006/42/EC. The 'Declaration of
Conformity' is contained within.**



Since 1922

**Avdel® iForm™**

Since 1936

2010



Our Technology, Your Success

AUSTRALIA**Infastech (Australia) Pty Ltd.**

891 Wellington Road
Rowville
Victoria 3178
Tel: +61 3 9765 6400
Fax: +61 3 9765 6445
info@infastech.com.au

CANADA**Avdel Canada Limited**

1030 Lorimar Drive
Mississauga
Ontario L5S 1R8
Tel: +1 905 364 0664
Fax: +1 905 364 0678
infoAvdel-Canada@infastech.com

CHINA**Infastech (China) Ltd.**

RM 1708, 17/F., Nanyang Plaza,
57 Hung To Rd., Kwun Tong
Hong Kong
Tel: +852 2950 0631
Fax: +852 2950 0022
infochina@infastech.com

FRANCE**Avdel France S.A.S.**

33 bis, rue des Ardennes
BP4
75921 Paris Cedex 19
Tel: +33 (0) 1 4040 8000
Fax: +33 (0) 1 4208 2450
AvdelFrance@infastech.com

GERMANY**Avdel Deutschland GmbH**

Klusriede 24
30851 Langenhagen
Tel: +49 (0) 511 7288 0
Fax: +49 (0) 511 7288 133
AvdelDeutschland@infastech.com

INDIA**Infastech Fastening Technologies****India Private Limited**

Plot No OZ-14, Hi Tech SEZ,
SIPCOT Industrial Growth Center,
Oragadam, Sriperumbudur Taluk,
Kanchipuram District,
602105 Tamilnadu
Tel: +91 44 4711 8001
Fax: +91 44 4711 8009
info-in@infastech.com

ITALY**Avdel Italia S.r.l.**

Viale Lombardia 51/53
20047 Brugherio (MI)
Tel: +39 039 289911
Fax: +39 039 2873079
vendite@infastech.com

JAPAN**Infastech Kabushiki Kaisha**

Center Minami SKY,
3-1 Chigasaki-Chuo, Tsuzuki-ku,
Yokohama-city,
Kanagawa Prefecture
Japan 224-0032
Tel: +81 45 947 1200
Fax: +81 45 947 1205
info@infastech.co.jp

MALAYSIA**Infastech (Malaysia) Sdn Bhd**

Lot 63, Persiaran Bunga Tanjung 1,
Senawang Industrial Park
70400 Seremban
Negeri Sembilan
Tel: +606 676 7168
Fax: +606 676 7101
info-my@infastech.com

SINGAPORE**Infastech (Singapore) Pte Ltd.**

31 Kaki Bukit Road 3
#05-03/06 Techlink
Singapore, 417818
Tel: +65 6372 5653
Fax: +65 6744 5643
info-sg@infastech.com

SOUTH KOREA**Infastech (Korea) Ltd.**

212-4, Suyang-Ri,
Silchon-Eup, Kwangju-City,
Kyunggi-Do, Korea, 464-874
Tel: +82 31 798 6340
Fax: +82 31 798 6342
info@infastech.co.kr

SPAIN**Avdel Spain S.A.**

C/ Puerto de la Morcuera, 14
Poligono Industrial Prado Overa
Ctra. de Toledo, km 7,8
28919 Leganés (Madrid)
Tel: +34 91 3416767
Fax: +34 91 3416740
ventas@infastech.com

TAIWAN**Infastech/Tri-Star Limited**

No 269-7, Baodong Rd,
Guanmiao Township,
71841 Tainan County,
Taiwan, R.O.C
Tel: +886 6 596 5798 (ext 201)
Fax: +886 6 596 5758
info-tw@infastech.com

UNITED KINGDOM**Avdel UK Limited**

Pacific House
2 Swiftfields
Watchmead Industrial Estate
Welwyn Garden City
Hertfordshire AL7 1LY
Tel: +44 (0) 1707 292000
Fax: +44 (0) 1707 292199
enquiries@infastech.com

USA**Avdel USA LLC**

614 NC Highway 200 South
Stanfield, North Carolina 28163
Tel: +1 704 888 7100
Fax: +1 704 888 0258
infoAvdel-USA@infastech.com

Manual No.	Issue	Change Note No.
07900-00790	AB	03/022
	B	07/044
	B2	07/142
	B3	11/081

www.avdel-global.com
www.infastech.com

Autosert® (equipment), Avbolt®, Avdel®, Avdelmate®, Avdel TX2000®, Avdelok®, Avex®, Avibulb®, Avinox®, Avinut™, Avlug®, Avmatic®, Avplas®, Avseal®, Avsert®, Avtainer®, Avtronic®, Briv®, Bulbex®, Chobert®, Eurosert®, Fastriv®, Finsert®, Genesis®, Grovit®, Hemlok®, Hexsert®, Holding your world together®, Hydra®, Interlock®, Klamp-Tite®, KlampTite KTR®, Kvex®, Maxlok®, Monobolt®, Monobulb®, Neobolt®, Nutsert®, Nutsert SQ®, Portariv®, Rivmatic®, Rivscrew®, Speed Fastening®, Squaresert®, Stavex®, Supersert®, Thin Sheet Nutsert®, Titan®, T-Lok®, TLR®, TSN®, TX2000®, Versa-Nut®, Viking® and Viking 360® are trademarks of Avdel UK Limited. Infastech™ and Our Technology, Your Success™ are trademarks of Infastech Intellectual Properties Pte Ltd. The names and logos of other companies mentioned herein may be trademarks of their respective owners. This document is for informational purposes only. Infastech makes no warranties, expressed or implied, in this document. Data shown is subject to change without prior notice as a result of continuous product development and improvement policy. Your local Avdel representative is at your disposal should you need to confirm latest information.